日本語

MG-Wave 定電流照明用電源

MLEK-A080W1LRD
MLEK-A230W1LRD

オプション -KE/-AE/-AC 含む

取扱説明書

－ 目 次 －

目次	1
1. はじめに	1
使用上の注意	2
保証	2
パッケージ内容の確認	3
2. 特徴	3
3. 設置	4
基本構成について	4
各部の名称と働き	4
設置	5
4. 外部装置との接続	5
外部信号接続コネクタについて	5
出力コネクタについて	7
5. メンテナンスについて	7
故障かな？と思ったら	7
6. 仕様	8
オプション	9
外形寸法	12
《MEMO》	13
《付録》	14

1. はじめに

製品の安全な使用のためこの取扱説明書を必ずお読みになり、ご理解のうえご使用ください。またお読みになった後は、本書をいつでも見られるところに保管してください。

警告表示の意味	以下の警告表示は、本書の中で使用されているものです。 表示の内容をよく理解してから、本書をお読みください。
⚠ **警告**	この表示の注意事項を守らないと、軽傷や中程度の障害を負ったり、死亡や重症に至るおそれがある内容、または重大な物的損害を受けるおそれがある内容を示しています。

使用上の注意

警告	以下の内容をご確認のうえ、ご使用ください。

- 本製品を他の機器と組み合わせて使用する場合、組み合わせる機器との適合はお客様にて確認してください。
- 本製品を他の機器と組み合わせて使用する場合、そのシステムが適合すべき規格・法規・規制はお客様にて確認してください。
- 本製品を他の機器と組み合わせて使用する場合、システムの中で本製品が意図した用途に対して適切に配電・設置・使用されていることはお客様にて確認してください。
- システム全体として確実な安全対策が施されていない場合、生命や財産に重大な危険を及ぼす可能性のある設備に本製品を使用しないでください。
- 本製品に水がかからない場所に設置してください。
- もし何らかの異物が製品に付着した場合、乾いた布で完全にふき取ってください。
- 保守部品の定期的な点検および交換をしてください。
- 不具合が発生した場合、分解することなく弊社まで修理を依頼してください。

その他の注意事項

- 本製品を廃棄する場合、産業廃棄物として各地域の法令に基づいて処理してください。
- 寸法と重量などの数値は参考値です。
- 本製品(添付品・オプション品)の仕様は、改良や他の理由により予告なく変更になる場合があります。
- 不明な点は、必ず弊社までお問い合わせください。

保証

保証期間

本製品の保証期間は、納入後 2 年間となります。取扱説明書に記載された製品の正しいご使用方法にて購入日より 2 年以内に故障が発生した場合に限り、無償にて修理いたします。

保証範囲

保証期間中に、製品に弊社の責による不具合が発生した場合は、無償にて故障部分の交換または修理を実施いたします。ただし、以下の場合は除外されます。

- 出荷当時の技術水準では予見できなかった場合
- 本製品以外の原因による場合
- 弊社以外による改造または修理による場合
- 本来の使い方以外の使用による場合
- 落下や衝撃など取り扱いが不適切なために発生した場合
- 出張修理の場合
- 天災や公害など弊社の責ではない原因による場合
- 弊社に不具合の現象を確認する機会がない場合

本製品に関連する直接的または間接的損害については、いかなる責任も負いかねます。また保証の範囲は、製品の単価を超えないものとします。なお、上記は日本国内での取引および使用を前提といたします。海外での取引および使用については弊社までお問い合わせください。

パッケージ内容の確認

部品名	数量	単位	備考
本体	1	個	―
ACコードセット	1	本	※
取扱説明書	1	冊	本書

※ ご購入時の型番の接尾辞により、『-100V』には『MC-AC100A-2.0M』が、『-200V』には『MC-AC200A-2.0M』が添付されております。電源接続前に、主電源コードが使用される国の法律・規格を満足し、電源電圧・温度の仕様条件に合っているか確認してください。

5 ページ: 設置　8 ページ: 仕様　9 ページ: オプション　参照

2. 特徴

使用可能な照明

モリテックス製 MG-Wave の照明のうち、以下の照明がご使用になれます。　※1,※2

MLEK-A080W1LRD ： 4 ピン / 0.8 [A] 以下の照明

MLEK-A230W1LRD ： 4 ピン または 4 ピン+2 ピン / 2.3 [A] 以下の照明

出力

1 チャンネルの出力が可能です。

マニュアル調整機能

前面パネルの出力調整スイッチで出力を調整し、接続された LED 照明を調光することが可能です。

※ MANU/REMO スイッチが、MANU の時のみ有効です。

※ COARSE で粗調整が、FINE で微調整が可能です。

※ 0,1,・・・・,E,F は 16 進数です。

※ (COARSE, FINE)が(0,0)で MIN、(F,F)で MAX になります。

※ (0,0)から(0,5)程度まで、出力しない範囲があります。

リモート調整機能

後面パネルの外部信号接続コネクタに8ビットのデジタル信号を入力する事で出力を調整し、接続された LED 照明を調光することが可能です。

※ MANU/REMO スイッチが、REMO の時のみ有効です。

出力 ON/OFF 機能

外部コネクタに信号を入力する事により、接続されたLED照明を消灯できます。

※ MANU／REMOに関係なく動作します。

制御エラー信号出力

照明未接続時、照明への出力を遮断し、外部信号接続コネクタに制御エラー信号を出力します。

※ MANU／REMOに関係なく動作します。

⚠	警告	※1 指定された照明以外は接続しないでください。 ※2 指定された電流値を超えないようにしてください。

3. 設置

基本構成について

- 本装置と MG-Wave の照明を接続することでご使用になれます。
- 外部信号接続コネクタに信号を接続してご使用になれます。

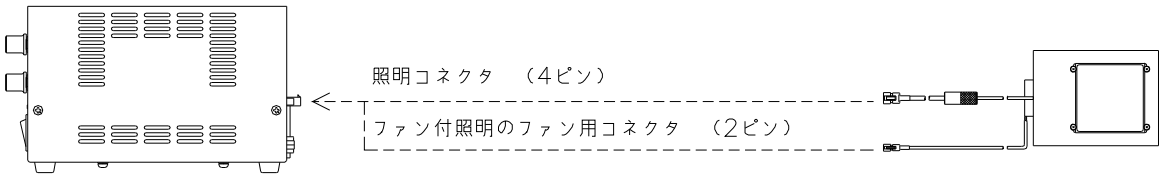

※ ファン付照明は照明ファン用出力コネクタを使用します。(MLEK-A230W1LRD のみ)

※ オプションで、外部接続ケーブル・照明用中継ケーブル・照明ファン用中継ケーブルもあります。
(MC-EXC-02, M-RCB4**L, M-RCB0**L)

各部の名称と働き

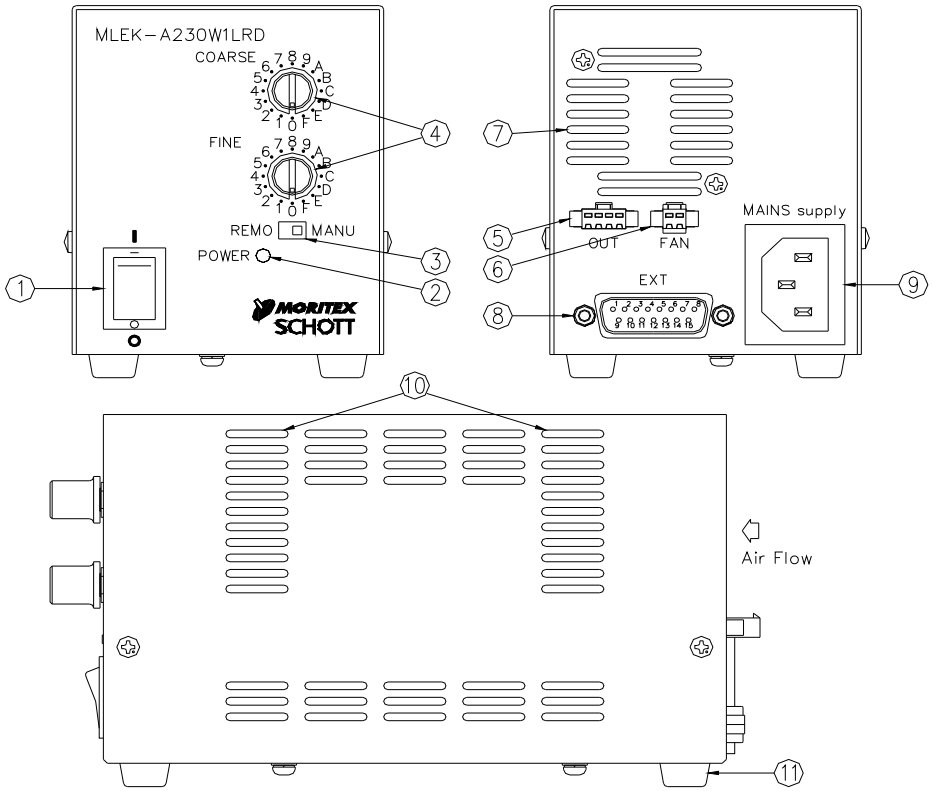

①	電源スイッチ	『 I 』側にすると、電源が入ります。
②	パワーインジケータ	電源が入っている時に点灯します。
③	MANU/REMO スイッチ	出力調整のマニュアルとリモートを設定します。
④	出力調整スイッチ	マニュアルの時に、出力を調整します。
⑤	照明用出力コネクタ:OUT	照明を接続します。
⑥	照明ファン用出力コネクタ:FAN	ファン付照明のファンケーブルを接続します。
⑦	冷却ファン	内部を冷却します。(吸い込み)
⑧	外部信号接続コネクタ:EXT	外部機器を接続するためのコネクタです。
⑨	AC インレット	AC ケーブルを差し込みます。
⑩	側面空気穴	冷却用ファンの空気穴です。(吐き出し)
⑪	ゴム足	オプションの取付ブラケットを使用するときは外します。

※ 図は MLEK-A230W1LRD のものです。

※ ⑥,⑦は MLEK-A080W1LRD にはありません。

設置

ゴム足を下にした水平設置。

※ 設置後、本体周囲に 10mm 以上の空間を確保してください。

※ 電源スイッチの ON/OFF が容易に行える場所、あるいはインレットまたはプラグが容易に取り外せる場所に設置してください。

※ 感電保護 : クラス I 機器。

※ 使用する際には、入力する AC 電圧と使用する国や地域の規格に適合した適切な電源コードをご使用ください。

※ 以下の構成にて EU 指令/EN 規格に適切に適合することができます。
長さ:3m 以下　　端子:L/N/PE
クラス I 機器用プラグにて保護接地端子に接続
オプションの MC-AC200A-2.0M は上記規格に適合しております。

4. 外部装置との接続

⚠	**警告**	・接続する機器の一次側の回路から強化絶縁以上で分離された SELV 回路以外は接続しないでください。 ・外部信号接続ケーブルは必ずシールド線を使用し、長さは 2 m 以下を推奨します。(オプション： MC-EXC-02) ・過大な入力や過負荷はしないでください。

外部信号接続コネクタについて (EXT)

型式

本体側コネクタ	外部ケーブル側コネクタ
HDAB-15P(05)(オス) (HRS製) 固定ネジ M2.6	HDAB-15S(05) :コネクタ(メス)　(HRS製) HDA-CTH :コネクタケース　(HRS製) または 同等品

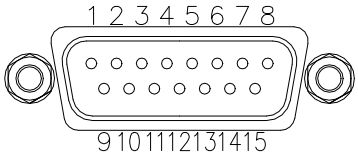

ピンアサイン

No.	名　称		No.	名　称	
1	8bitデジタル入力 2^0 (LSB)		9	COMMON (+)	※1
2	8bitデジタル入力 2^1		10	出力ON／OFF信号(入力)	※2
3	8bitデジタル入力 2^2		11	制御エラー信号出力	※4
4	8bitデジタル入力 2^3	※3	12	NC	
5	8bitデジタル入力 2^4		13	NC	
6	8bitデジタル入力 2^5		14	NC	
7	8bitデジタル入力 2^6		15	NC	
8	8bitデジタル入力 2^7 (MSB)				

※1 5 V から 24 Vに対応しています。
・使用中の入力変動は行わないでください。

※2 "L"入力時 ・・・・・・・・・・・・・・・・・・・・・・・・・ 出力OFF
電流　COMMON 5 V時 : 1 mA 、COMMON 24 V時 : 6 mA
"H"(COMMON)入力またはオープン時 ・・・・・ 出力ON
・MANU/REMOに関係なく動作します。
・オープンコレクタ入力が可能です。

※3 REMOのみ有効です。(出力の状態については真理値表を参照)
・"L"入力時 1回路あたりの電流　COMMON 5 V時 : 1 mA 、COMMON 24 V時 : 6 mA
・オープンコレクタ入力が可能です。

※4 オープンエミッタ出力です。
正常時 : 出力オープン
エラー時 : 出力COMMONショート
・4 mA 以下の電流でご使用ください。
・MANU/REMOに関係なく出力いたします。

真理値表

出力調整スイッチ		外部信号　COMMON ＋									出力	
COARSE	FINE	出力 ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	出力(照明)の状態	制御 エラー
×	×	L	×	×	×	×	×	×	×	×	出力OFF	×
×	×	H	×	×	×	×	×	×	×	×	出力ON	×
×	×	×	×	×	×	×	×	×	×	×	制御エラー	H
0	0	H	L	L	L	L	L	L	L	L	MIN出力	L
0	1	H	L	L	L	L	L	L	L	H		L
0	2	H	L	L	L	L	L	L	H	L		L
:	:	:	:	:	:	:	:	:	:	:	:	L
:	:	:	:	:	:	:	:	:	:	:	:	L
F	D	H	H	H	H	H	H	H	L	H		L
F	E	H	H	H	H	H	H	H	H	L		L
F	F	H	H	H	H	H	H	H	H	H	MAX出力	L

入力　　H　：　High(COMMON)入力　または　入力オープン
　　L　：　Low 入力
出力　　H　：　出力　COMMONショート　(カプラON)
　　L　：　出力　オープン　　(カプラOFF)
×　：　H　・　L　任意
(COARSE,FINE) が (0,5) 程度まで点灯しない範囲があります。

入出力回路例

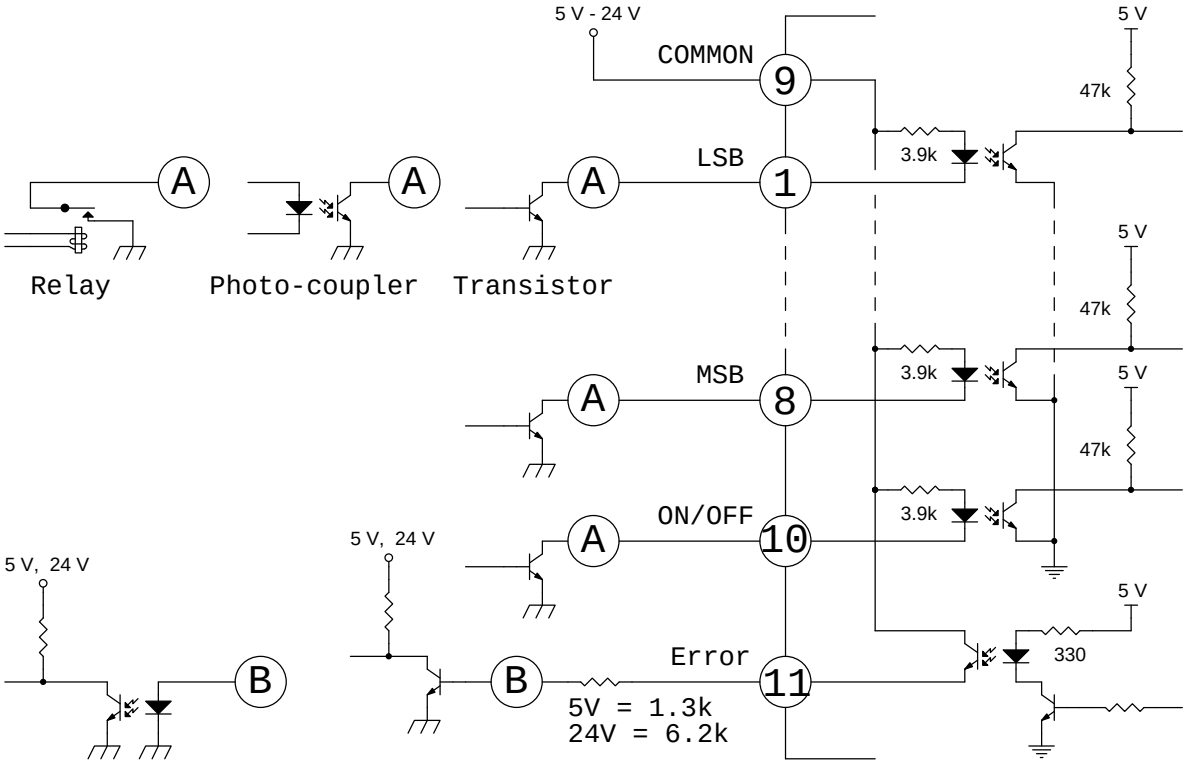

出力コネクタについて（MG-Wave 照明用）

型式

本体側出力コネクタ	照明側コネクタ	
SMP-04V-BC （JST製）	SMR-04V-B （JST製） または 同等品	※1
SMP-02V-BC （JST製）	SMR-02V-B （JST製） または 同等品	※2

※1 照明用出力コネクタ。

※2 照明ファン用出力コネクタ。その他の用途にはご使用になれません。
（MLEK-A230W1LRD のみです。）

ピンアサイン： 照明用出力コネクタ （OUT）

No.	名 称	
1	電流出力 （＋）	※1
2	センシング （＋）	※2
3	センシング （－）	※2
4	電流出力 （－）	※1

※1 出力電圧は 12.5 [V] 以下です。

※2 MG-Waveシリーズの照明(4ピンタイプ)は、全てセンシング調整済みです。
MG-Waveシリーズの照明(4ピンタイプ)以外、絶対に接続しないでください。

オプション： M-RCB4**L

ピンアサイン： 照明ファン用出力コネクタ （FAN）

No.	名 称	
1	電圧出力 （＋）	※1
2	電圧出力 （－）	※1

※1 出力電圧は 12.5 [V] 以下です。

オプション： M-RCB0**L

5. メンテナンスについて

警告

・お手入れをする時は、必ず電源を切り、外部機器との接続を全てはずしてから行ってください。

・絶対に分解はしないでください。

・ 本体の汚れは、乾いた布でふき取ってください。

・ 汚れがひどい時は、布に薄めた中性洗剤を含ませ、かたくしぼってから汚れをふき取ってください。

故障かな？と思ったら

症状	原因	対策
照明が点灯しない 照明が暗い	・照明は正しく接続されていますか？ ・MANU/REMO の設定は正しいですか？ ・出力調整はされていますか？ ・外部機器が正しく接続されていますか？	・照明を正しく接続してください ・MANU/REMO を確認してください ・調整してください ・外部機器を正しく接続してください
ON/OFF しない	・外部機器が正しく接続されていますか？	・外部機器を正しく接続してください
信号が出ない	・外部機器が正しく接続されていますか？	・外部機器を正しく接続してください

6. 仕様

型式	MLEK-A080W1LRD	MLEK-A230W1LRD	
入力電圧	AC 100 - 240 [V]（本体・ACインレット）		※1
入力電流	0.3/0.15 [A] (AC 100 / 240 [V])	0.7/0.4 [A] (AC 100 / 240 [V])	
入力周波数	50/60 [Hz]		
入力突入電流	15 [A] max. at AC 100 [V] 35 [A] max. at AC 240 [V]	15 [A] max. at AC 100 [V] 30 [A] max. at AC 240 [V]	※2
出力数	1チャンネル出力		
出力電圧	Max 12.5 [V]		
出力電流	0.8 [A] max. (0.8 [A] 照明使用時)	2.3 [A] max. (2.3 [A] 照明使用時)	
出力制御方式	定電流制御		
出力形態	DC連続出力		
出力調整機能	有り　マニュアル/リモート		
出力可変範囲	0 - 100 [%]		
リモートコントロール	有り 8ビットデジタル出力調整 / 出力ON/OFF制御		
信号出力	有り　制御エラー信号		
保護機能	照明未接続時の出力シャットダウン		
環境条件	屋内使用 最高高度：2000 m 温度：0 ℃ ～ 45 ℃ 湿度：31 ℃ まで 80 % RH、40 ℃ で 50 % RH に線形に低下 主電源電圧変動が公称電圧の ± 10 % 以内 設置カテゴリ Ⅱ 汚染度2		
保存温度/湿度	-20 ～ 85 [℃] / 20 ～ 85 [%RH]（結露なきこと）		
設置方法	ゴム足を下にした水平設置		
感電保護	クラスⅠ機器		
冷却方式	自然空冷	ファンによる強制空冷	
保護等級	IP 30（EN 60529）		※3
外形寸法	W75×H90×D150（突起部除く）		
質量	約　1 [kg]	約　1.1 [kg]	
欧州整合規格	Low Voltage: EN61010-1 EMC: EN55011, EN61000-3-2, EN61000-3-3, EN61000-6-2		※4

※1 使用する際には、入力するAC電圧/電流と使用する国や地域の規格に適合した適切な電源コードをご使用ください。（オプションにて製品に添付されているケーブルの型式をご確認ください。）

※2 コールドスタート時。

※3 直径2.5mm以上の物体が内部に侵入しません。水の浸入に対して保護されていません。

※4 MLEK-A080W1LRD、MLEK-A230W1LRD及びオプション品は、上記ヨーロッパ規格への適合をCEマーキングの宣言書にて宣言しております。また本体をCE適合にて使用する場合、CEマーキングに適合したACケーブルをご使用ください。
（オプションのMC-AC200A-2.0MはCEマーキングに適合しております。）

オプション

名称	型式	CE適合 ○:Yes ×:No
照明用中継ケーブル (別売り)	M-RCB4**L (4ピン用延長ケーブル) ※1 ** 2桁は長さ (01=1m、02=2m、03＝3m)	1m,2m:○ 3m:× ※6
照明ファン用中継ケーブル (別売り)	M-RCB0**L (2ピン用延長ケーブル) ※1 ** 2桁は長さ (01=1m、02=2m、03＝3m)	1m,2m:○ 3m:× ※6
AC 200 Vケーブル (別売り)	MC-AC200A-2.0M (2mのみ) ※2	○
AC 200 Vケーブル (別売り)	MC-AC200B-2.0M (2mのみ) ※3	×
AC 100 Vケーブル (別売り)	MC-AC100A-2.0M (2mのみ) ※4 変換アダプタ付(ACケーブル先端に取り付け)	×
外部接続ケーブル (別売り)	MC-EXC-02 (2m・片端バラ) ※1	○
取付ブラケット (別売り)	LBK-001 (底面取付タイプ)	-
8bitデジタル入力 KE改造 (受注生産) 『-KE』	論理反転 ※5	○
8bitデジタル入力 AE改造 (受注生産) 『-AE』	COMMON極性反転 ※5	○
8bitデジタル入力 AC改造 (受注生産) 『-AC』	COMMON極性反転 および 論理反転 ※5	○

※1 長さ違いはお問い合わせください。

※2 ※3 ※4

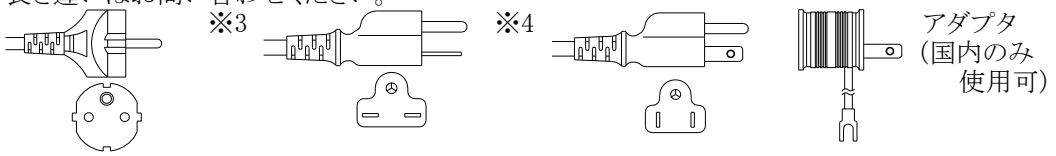

CE AC 250Vまで

<PS>E AC 250Vまで

<PS>E/UL/CSA AC 125Vまで

<PS>E

(使用する国や地域の規格に適合したケーブルを使用してください。)
(ケーブル仕様の詳細は別途弊社までお問い合わせください。)

※5 表1 参照 (型式末尾に-KE/-AE/-AC)

※6 3m延長ケーブルはCE適合外です

表1

Type	COMMON	出力(照明)の状態				エラー信号 出力形態
		8ビット論理	8ビットオープン	ON/OFF論理	ON/OFFオープン	
標準 (KC)	+	L 消灯	MAX点灯	L 消灯	点灯	オープンエミッタ
KE	+	L 点灯	消灯	L 消灯	点灯	オープンエミッタ
AC	-	H 消灯	MAX点灯	H 消灯	点灯	オープンコレクタ
AE	-	H 点灯	消灯	H 消灯	点灯	オープンコレクタ

※ COMMON +: 外部電源 +, COMMON −: 外部電源 −

※ 論理 H: 外部電源 +, 論理 L: 外部電源 −

オプション品 ピンアサイン

・KE タイプ

5 ページの標準ピンアサイン参照。

・AC/AE タイプ

No.	名　　称		No.	名　　称	
1	8bitデジタル入力 2^0 (LSB)		9	COMMON (－)	※1
2	8bitデジタル入力 2^1		10	出力ON／OFF信号(入力)	※2
3	8bitデジタル入力 2^2		11	制御エラー信号出力	※4
4	8bitデジタル入力 2^3	※3	12	NC	
5	8bitデジタル入力 2^4		13	NC	
6	8bitデジタル入力 2^5		14	NC	
7	8bitデジタル入力 2^6		15	NC	
8	8bitデジタル入力 2^7 (MSB)				

※1 COMMONに対し、各入力ピンは5 V から 24 Vに対応しています。
・使用中の入力変動は行わないでください。
※2 "H"入力時 ・・・・・・・・・・・・・・・・・・・・・・・・・ 出力OFF
電流　H = 5 V時：1 mA 、H = 24 V時：6 mA　(電圧入力)
"L"(COMMON)入力またはオープン時 ・・・・・ 出力ON
・MANU/REMOに関係なく動作します。
※3 REMOのみ有効です。(出力の状態については真理値表を参照)
・"H"入力時　1回路あたりの電流　　H = 5 V時：1 mA 、H = 24 V時：6 mA　(電圧入力)
※4 オープンコレクタ出力です。
正常時：出力オープン
エラー時：出力COMMONショート
・4 mA 以下の電流でご使用ください。
・MANU/REMOに関係なく出力いたします。

オプション品　真理値表

・KE タイプ

出力調整スイッチ		外部信号　COMMON ＋									出力	
COARSE	FINE	出力 ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	出力(照明)の状態	制御 エラー
×	×	L	×	×	×	×	×	×	×	×	出力OFF	×
×	×	H	×	×	×	×	×	×	×	×	出力ON	×
×	×	×	×	×	×	×	×	×	×	×	制御エラー	H
0	0	H	H	H	H	H	H	H	H	H	MIN出力	L
0	1	H	H	H	H	H	H	H	H	L		L
0	2	H	H	H	H	H	H	H	L	H		L
:	:	:	:	:	:	:	:	:	:	:	:	L
:	:	:	:	:	:	:	:	:	:	:	:	L
F	D	H	L	L	L	L	L	L	H	L		L
F	E	H	L	L	L	L	L	L	L	H		L
F	F	H	L	L	L	L	L	L	L	L	MAX出力	L

入力　　H　：　High(COMMON)入力　または　入力オープン
　　L　：　Low 入力
出力　　H　：　出力　COMMONショート　(カプラON)
　　L　：　出力　オープン　　(カプラOFF)
× ： H ・ L 任意
(COARSE,FINE) が (0,5) 程度まで点灯しない範囲があります。

・AC タイプ

出力調整スイッチ		外部信号　COMMON －									出力	
COARSE	FINE	出力 ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	出力(照明)の状態	制御 エラー
×	×	H	×	×	×	×	×	×	×	×	出力OFF	×
×	×	L	×	×	×	×	×	×	×	×	出力ON	×
×	×	×	×	×	×	×	×	×	×	×	制御エラー	L
0	0	L	H	H	H	H	H	H	H	H	MIN出力	H
0	1	L	H	H	H	H	H	H	H	L		H
0	2	L	H	H	H	H	H	H	L	H		H
:	:	:	:	:	:	:	:	:	:	:	:	H
:	:	:	:	:	:	:	:	:	:	:	:	H
F	D	L	L	L	L	L	L	L	H	L		H
F	E	L	L	L	L	L	L	L	L	H		H
F	F	L	L	L	L	L	L	L	L	L	MAX出力	H

入力　　H　：　High入力
　　L　：　Low(COMMON)入力　または　入力オープン
出力　　H　：　出力　オープン　　(カプラOFF)
　　L　：　出力　COMMONショート　(カプラON)
× ： H ・ L 任意
(COARSE,FINE) が (0,5) 程度まで点灯しない範囲があります。

・AE タイプ

出力調整スイッチ		外部信号　COMMON －　　出力											
COARSE	FINE	出力 ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	出力(照明)の状態	制御 エラー
×	×	H	×	×	×	×	×	×	×	×	出力OFF	×
×	×	L	×	×	×	×	×	×	×	×	出力ON	×
×	×	×	×	×	×	×	×	×	×	×	制御エラー	L
0	0	L	L	L	L	L	L	L	L	L	MIN出力	H
0	1	L	L	L	L	L	L	L	L	H		H
0	2	L	L	L	L	L	L	L	H	L		H
:	:	:	:	:	:	:	:	:	:	:	:	H
:	:	:	:	:	:	:	:	:	:	:	:	H
F	D	L	H	H	H	H	H	H	L	H		H
F	E	L	H	H	H	H	H	H	H	L		H
F	F	L	H	H	H	H	H	H	H	H	MAX出力	H

入力　H　：　High入力
　　L　：　Low(COMMON)入力　または　入力オープン
出力　H　：　出力　オープン　　(カプラOFF)
　　L　：　出力　COMMONショート　(カプラON)
× ： H ・ L 任意
(COARSE,FINE) が (0,5) 程度まで点灯しない範囲があります。

オプション品　入出力回路例

・KE タイプ

6 ページの標準入出力回路例参照。

・AC/AE タイプ

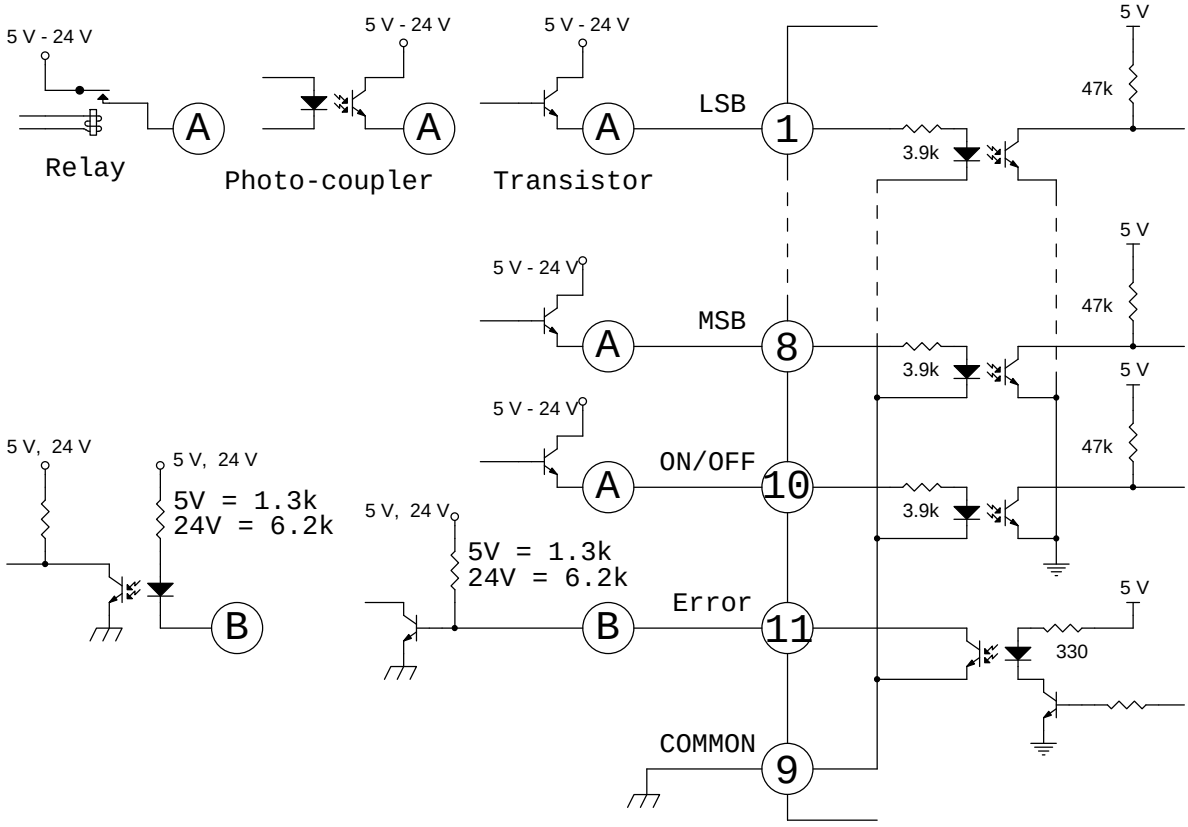

外形寸法

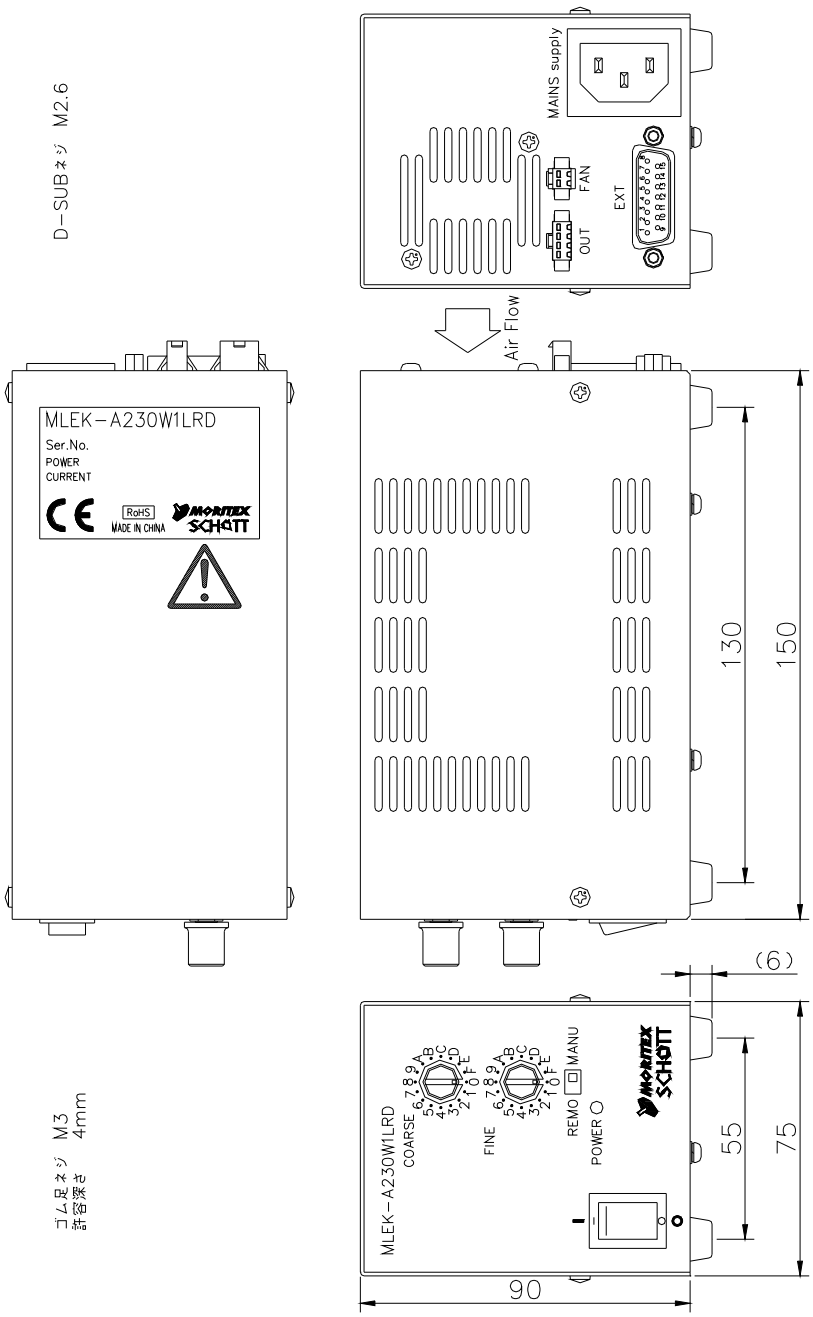

図は MLEK-A230W1LRD のものです。
MLEK-A080W1LRD には、ファン・2 ピンコネクタおよび背面の空気孔は有りません。

《 MEMO 》

《付録》

・不明な点はご相談ください。

補修部品の詳細やアフターサービスについてご不明な点は、お買い求めの販売店または弊社営業所に遠慮なくお問い合わせください。

・修理を依頼される場合は、次のことをお知らせください。

機　　種	： MLKE-A080W1LRD / MLEK-A230W1LRD
製 造 番 号	： 本体に記載
ご 購 入 日	：　　年　　月　　日
故 障 状 況	： 出来るだけ詳しく
お名前（法人名または個人名）、ご住所、電話番号、e-mail アドレス	

English

Power source unit for MG-Wave constant current Illuminators

MLEK-A080W1LRD
MLEK-A230W1LRD

with or without suffix: -KE, -AE, -AC

INSTRUCTION MANUAL

- Table of Contents -

Table of Contents	15
1. Introduction	15
Precautions for Correct Use	16
Warranty	16
Confirming Package Contents	17
2. Features	17
3. Installation	18
Basic System Configuration	18
Equipment Control	18
Installation	19
4. Connections	19
External Signal Connector	19
Connector for Illuminator	21
5. Maintenance	21
Troubleshooting	21
6. Specifications	22
Optional Items	23
Dimensions	26
7. Others	27
《Appendix》	28

1. Introduction

Please read this instruction manual carefully, before starting operation. Keep this book for the whole product lifetime, and store it in a place easily accessible.

Meanings of Warning Symbol	The following warning symbol is used in this manual. Be sure to fully understand the contents of the warning.
WARNING	This warning marking indicates a potentially hazardous situation, which can result in hazard to the operator or damage to the unit, if the directions of this Instruction Manual are not followed.

Precautions for Correct Use

WARNING	Use this product only after understanding contents of the following:

- If using this product in combination with other apparatuses, please confirm the correctness/compatibility of the connection with these external apparatuses (especially regarding insulation requirements).
- If using this product in combination with other apparatuses, please confirm any standards, codes, or regulations that apply to the combination of the apparatuses.
- If using this product in combination with other apparatuses, please confirm that installation, connection and use within the entire system is according to the specification of this product (as described in this Instruction Manual) and according to those of all other apparatuses.
- Never use the product for an application involving serious risks to life or property as long as the whole system is not equipped with appropriate safety measures of the relevant safety category.
- Please install this product in such a way that water cannot sprinkle into it.
- Whenever some matter/dirt stuck to the product, please completely wipe it off, using a dry cloth.
- This product needs periodical inspection and exchange of maintenance parts.
- Whenever trouble occurs, please request repair to MORITEX, and do not dismantle the product by your own.

Other precautions

- When a customer wants to scrap the product, the whole equipment has to be disposed as industrial waste, according to laws and ordinances of the customer's area.
- Dimensions and Weights are reference.
- Specifications of the product (or accessories or optional items) may be changed at any time based on improvements and other reasons without any notice.
- Please inquire to MORITEX about indistinct contents.

Warranty

The term of a warranty

The warranty of this product lasts for two years from the date of purchase. In case of product failure within two years from the date of purchase, and there is no doubt on the correct utilization of the product, according to this instruction manual the unit will be repaired at no charge.

Limitations of warranty

When inconvenience due to our responsibility occurs to a product during the warranty period, the part that has trouble will be changed to a new part, or repaired, free of charge. But, if the cause of the trouble fits to the following, the product is out of warranty.

- The cause of the trouble is of such technical nature that could not be foreseen at the time of shipment.
- The trouble is not caused by this product.
- The trouble is caused by modification or repair by a person other than MORITEX.
- The trouble is caused by unauthorized use, not conforming to this Instruction Manual.
- The trouble is caused by the inappropriate handling such as a drop or a shock.
- The trouble is repaired by MORITEX at on-site service.
- The trouble is caused by a condition out of our responsibility such as a natural disaster or pollution.
- The cause of the trouble can not be identified by MORITEX.

MORITEX shall not be responsible for indirect or consequential damages, in any way related to this product. The responsibility of MORITEX for any act shall not exceed the price of this product. The warranty is limited to business and use in Japan. Please inquire to MORITEX about warranty overseas.

Confirming Package Contents

Part name	Quantity	Unit	Notes
Main body	1	piece	—
Power Supply Cord Set	1	piece	※
Instruction Manual	1	book	This book

※ 『MC-AC100A-2.0M』 is attached to 『-100V』 model. 『MC-AC200A-2.0M』 is attached to 『-200V』 model. (It depends on the suffix of the model that was purchased.)
Before connection to the power supply, please check the conformity of the specifications of the Power Supply Cord Set with the laws and standards of your country as well as the correct power and temperature rating.

Refer to Page 19: Installation, Page 22: Specifications, Page 23: Optional Items

2. Features

Applicable Illuminators

Requirements for applicable MG-Wave Illuminators (made by MORITEX) : ※1,※2

MLEK-A080W1LRD: Illuminator of up to 0.8 [A] /4pin

MLEK-A230W1LRD: Illuminator of up to 2.3 [A] /4pin or 4pin+2pin

Output

Number of output channels: 1 channel

Manual illuminance adjustment function

It is possible to adjust the illuminance of the Illuminator by using the Output Control SW on the front-panel.

※ Manual adjustment of the illuminance is possible when selecting MANU mode (MANU/REMO SW)

※ Hexadecimal control: 0,1,・・・・,E,F

※ (COARSE, FINE): (0,0) = MIN; (F,F) = MAX

※ Range between (0,0) and about (0,5) does not turn on the Illuminator.

Remote illuminance adjustment function

It is possible to adjust the illuminance of the Illuminator by inputting an 8bit digital signal to the External Signal Connector on the rear-panel.

※ Remote adjustment of the illuminance is possible when selecting REMO mode (MANU/REMO SW)

Output ON/OFF function

It is possible to turn off the Illuminator by inputting a relevant signal to the External Signal Connector.

※ Operation of this function is possible regardless of the MANU/REMO setting.

Control error signal output function

When illuminator is not connected, the unit shuts down the output power to the Illuminator and puts out a control error signal at the External Signal Connector.

※ This function works independent of the MANU/REMO setting.

WARNING

※1 Do not connect anything to output except designed illuminator.

※2 Please never exceed specified current values.

3. Installation

Basic System Configuration

- This Unit is dedicated for use with/for connection to the MG-Wave Illuminator.
- For external control, it is possible to connect an external apparatus via the External Signal Connector.

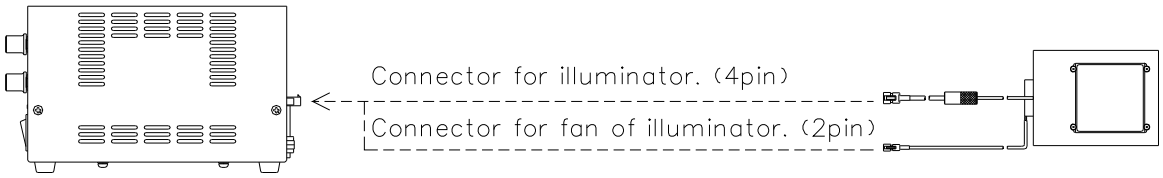

※ MLEK-A230W1LRD unit has an additional connector for the fan of the Illuminator.

※ The cables for connection to the EXT Connector and to the Illuminator and to the Fan of the Illuminator are supplied as Optional Item (MC-EXC-02, M-RCB4**L, M-RCB0**L).

Equipment Control

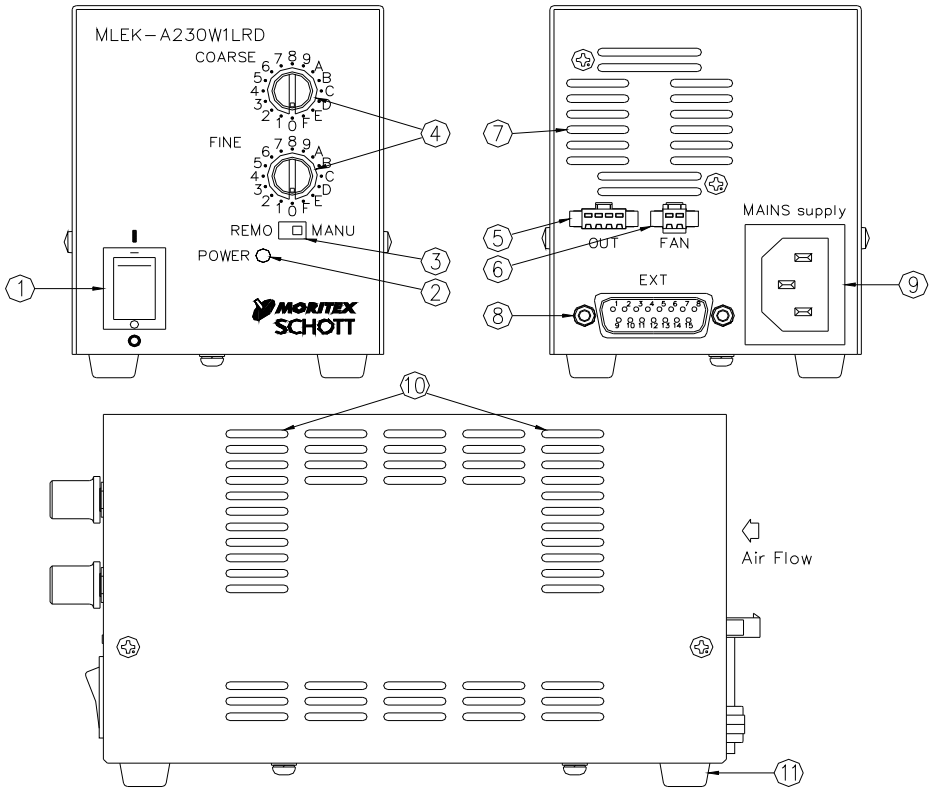

①	Power SW	Tilt to "I" side for turning on power.
②	Power Indicator	LED illuminates when power supply is ON.
③	MANU/REMO SW	Switch for selecting manual or remote control.
④	Output Control SW	Manual adjustment switch for output-control.
⑤	Connector for Illuminator: OUT	Terminal for connection to the Illuminator.
⑥	Connector for Fan of Illuminator: FAN	Terminal for connection to the fan of the Illuminator.
⑦	Cooling-Fan	Air inhaling type fan for cooling unit interior.
⑧	External Signal Connector: EXT	Terminal for external control.
⑨	MAINS supply	Inlet for connecting power supply cable.
⑩	Air Hole	Air hole for cooling forced by Fan (air-exhalation).
⑪	Rubber Feet	Take them off, when using with the optional installation bracket.

※ Drawings show the MLEK-A230W1LRD unit.

※ MLEK-A080W1LRD does not have ⑥,⑦.

Installation

Install horizontally on the rubber feet at the bottom of the unit.

※ Install the unit in such a way, that adequate space is left free for ventilation. Keep space of at least 10mm around the main body.

※ Be sure to install the unit in such a way that the Power Switch can be operated easily and the Mains Plug can be pulled out without hindrance, in case of emergency.

※ Protection Class: Class I equipment

※ Before using this product, please provide an appropriate power supply cord set conforming to the input power ratings and to the relevant standards of the area where you use this product.

※ The power supply cord set shall have following configurations:
Length: < 3 m; Conductors: L / N / PE; Class I type mains plug with reliable connection to the Protective Earthing Conductor of the Building Installation.
Optional Item MC-AC200A-2.0M does comply with these requirements.

4. Connections

WARNING

- Only SELV circuits, which have reinforced insulation to their equipment primary circuit, may be connected to the unit.
- For connection to the External Signal Connector, use a shielded cable with a recommended length of less than 2 m (Optional item: MC-EXC-02)
- Please do not excessive input or overload.

External signal connector (EXT)

Model

Terminal of the Unit	Connector of the cable
HDAB-15P(05) (male) (made by HRS) Screws: M2.6	HDAB-15S(05) : connector(female) (made by HRS) HDA-CTH : connector case (made by HRS) or its equivalent

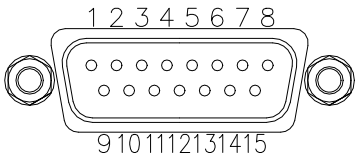

Pin assignment

No.	Identification		No.	Identification	
1	8bit digital input 2^0(LSB)		9	COMMON (+)	※1
2	8bit digital input 2^1		10	Input ON／OFF signal	※2
3	8bit digital input 2^2		11	Control error signal output	※4
4	8bit digital input 2^3	※3	12	NC	
5	8bit digital input 2^4		13	NC	
6	8bit digital input 2^5		14	NC	
7	8bit digital input 2^6		15	NC	
8	8bit digital input 2^7(MSB)				

※1 It is possible to input a voltage between 5V and 24V.
- Please do not change the input voltage during operation.

※2 Input "L" ····· Output OFF
Current: 1 mA (Common: 5 V), 6 mA (Common: 24 V)
Input "H"(COMMON) or Input open ····· Output ON
- Operation possible regardless from MANU/REMO selection.
- Open-Collector type input is possible.

※3 Only for REMO Control (Refer to Truth Table, shown below)
- Input "L", Current per circuit: 1 mA (Common: 5 V), 6 mA (Common: 24 V)
- Open-Collector type input is possible.

※4 Open-Emitter type output with following characteristics:
Normal Condition (no errors detected): Open Circuit
Control Error detected: Output short circuited to COMMON
- Please use signal with current equal or less than 4 mA.
- Function regardless of MANU/REMO selection

Truth table

Output control SW		External signals COMMON +									Output	
COARSE	FINE	Output ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	State of output (Illuminator)	Control Error
×	×	L	×	×	×	×	×	×	×	×	Output OFF	×
×	×	H	×	×	×	×	×	×	×	×	Output ON	×
×	×	×	×	×	×	×	×	×	×	×	Control Error	H
0	0	H	L	L	L	L	L	L	L	L	Output MIN	L
0	1	H	L	L	L	L	L	L	L	H		L
0	2	H	L	L	L	L	L	L	H	L		L
:	:	:	:	:	:	:	:	:	:	:	:	L
:	:	:	:	:	:	:	:	:	:	:	:	L
F	D	H	H	H	H	H	H	H	L	H		L
F	E	H	H	H	H	H	H	H	H	L		L
F	F	H	H	H	H	H	H	H	H	H	Output MAX	L

Input H : Input High (COMMON) or Input open
L : Input Low

Output (Control Error) H : Short Circuit to COMMON (Photo-coupler ON)
L : Open Circuit (Photo-coupler OFF)

× : H ・ L state not relevant

(COARSE,FINE): Range between (0,0) and about (0,5) does not turn on the Illuminator.

Example of input and output circuit

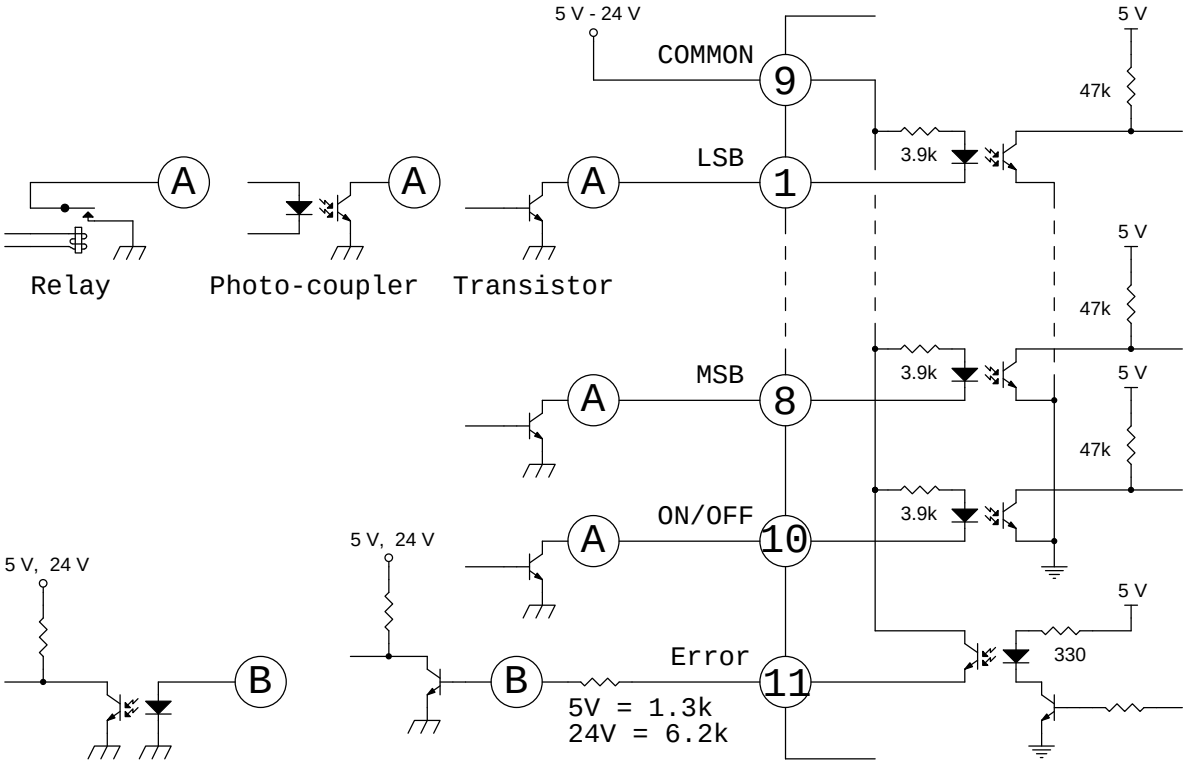

Connector for Illuminator (for MG-Wave Illuminator)

Model

Output Connector of the Unit.	Connector of the Illuminator	
SMP-04V-BC (made by JST)	SMR-04V-B (made by JST) or its equivalent	※1
SMP-02V-BC (made by JST)	SMR-02V-B (made by JST) or its equivalent	※2

※1 Connector for Illuminator.

※2 Connector for fan of Illuminator. Please do not use this terminal besides a designated usage. (FAN, only at MLEK-A230W1LRD unit.)

Pin assignment: Connector for Illuminator (OUT)

No.	Function / Identification	
1	Output Current (+)	※1
2	Sensor (+)	※2
3	Sensor (−)	※2
4	Output Current (−)	※1

※1 Maximum Output voltage is 12.5 V.

※2 The Sensor has been preset for illuminators of the MG-Wave series (4 pin type). Please do not connect anything else than illuminators of the MG-Wave series (4 pin type).

Optional item: M-RCB4**L

Pin assignment: Connector for Fan of Illuminator (FAN)

No.	Function / Identification	
1	Output voltage (+)	※1
2	Output voltage (−)	※1

※1 Maximum Output voltage is 12.5 V.

Optional item: M-RCB0**L

5. Maintenance

WARNING

・Please turn off the power switch and detach all connections before doing maintenance.

・Please never take the product apart.

- Please periodically wipe off any dirt by a dry cloth.
- If the contamination is worse, wipe it off with a cloth that has been lightly immersed in a weak solution of neutral detergent.

Troubleshooting: Before requesting repair, check the following items.

Symptom	Cause	Remedy
Illuminator does not turn on. Illuminator remains dark.	- Are all connectors correctly attached? - Is the MANU/REMO correctly set? - Is the output control correctly adjusted? - Are the external signals correctly set?	- Please attach connectors correctly. - Please set MANU/REMO correctly. - Please adjust output control. - Please connect signals correctly.
Unit does not turn ON/OFF.	- Are the external signals correctly set?	- Please connect signals correctly.
No Output Signal	- Are the external connections correctly set?	- Please correct the set-up.

6. Specifications

Model	MLEK-A080W1LRD	MLEK-A230W1LRD	
Input Voltage	AC 100 – 240 [V] (TN-C power distribution system)		※1
Input Current	0.3/0.15 [A] (AC 100 / 240 [V])	0.7/0.4 [A] (AC 100 / 240 [V])	
Input Frequency	50/60 [Hz]		
Rushing Current	15 [A] max. at AC 100 [V] 35 [A] max. at AC 240 [V]	15 [A] max. at AC 100 [V] 30 [A] max. at AC 240 [V]	※2
Number of Outputs	1 channel		
Output Voltage	Max 12.5 [V]		
Output Current	0.8 [A] max. (when using 0.8 [A] Illuminator)	2.3 [A] max. (when using 2.3 [A] Illuminator)	
Output Control	Constant curent control		
Output Characteristics	Continuous DC output		
Output Adjustment Function	Yes Manual / Remote		
Output Range	0 – 100 [%]		
Remote Control	Yes 8bit digital output control / Output ON/OFF control		
Signal Output	Yes Control Error Signal		
Protection Function	Shut down of an output (when illuminator is not connected)		
Environmental Conditions	Indoor use Altitude up to 2000 m Temperature 0 ℃ to 45 ℃ Maximum 80 % RH for temperatures up to 31 ℃ decreasing linearly to 50 % RH at 40 ℃ MAINS supply voltage fluctuations up to ± 10 % of the nominal voltage Installation category Ⅱ For use up to Pollution degree 2		
Storage Temperature/Humidity	-20 ～ 85 [℃] / 20 ～ 85 [%RH] (non-condensing)		
Installation Method	Horizontal installation on rubber feet.		
Protection Class	Class Ⅰ equipment		
Cooling Method	Air-cooling	Air-cooling forced by FAN	
International Protection Degree	IP 30 (EN 60529)		※3
Dimensions	W75×H90×D150 (Protuberances excluded)		
Mass	Approximately 1 [kg]	Approximately 1.1 [kg]	
Europian Harmonized Standards	Low Voltage: EN61010-1 EMC: EN55011, EN61000-3-2, EN61000-3-3, EN61000-6-2		※4

※1 Please use power supply cord set satisfying the input AC voltage/current ratings of the unit and complying to the relevant standards/laws of the area where you use this product. (Please confirm a model of an attached power supply cord set to the product with the table of optional items.)

※2 Specification for cold-start

※3 An object equal to or more than a diameter of 2.5mm does not reach hazardous parts inside the unit. The unit is not protected against invasion of water.

※4 MLEK-A080W1LRD, MLEK-A230W1LRD and all Optional Items, except stated explicitly do comply to these European Standards upon which CE marking is declared. Additionally, please use a Class I power supply cord set which conforms to CE marking in order to conform the unit to CE marking.
(Optional Item MC-AC200A-2.0M does comply with CE marking.)

Optional items

Name	Model	CE ○:Yes ×:No
Relay cable for Illuminator (optional sales)	M-RCB4**L (Relay cable for 4pin connector) ※1 **: length (01=1m, 02=2m, 03=3m)	1m,2m:○ 3m:× ※6
Relay cable for FAN of Illuminator (optional sales)	M-RCB0**L (Relay cable for 2pin connector) ※1 **: length (01=1m, 02=2m, 03=3m)	1m,2m:○ 3m:× ※6
AC 200 V Power Supply Cord (optional sales)	MC-AC200A-2.0M (only 2m length available) ※2	○
AC 200 V Power Supply Cord (optional sales)	MC-AC200B-2.0M (only 2m length available) ※3	×
AC 100 V Power Supply Cord (optional sales)	MC-AC100A-2.0M (only 2m length available) ※4 with Mains Plug Adapter (Attached to the tip of AC Plug)	×
External Connector & Cable (optional sales)	MC-EXC-02 (length: 2m, output side unattached) ※1	○
Installation bracket (optional sales)	LBK-001 (Bottom type)	−
8bit digital input KE type (custom-made) 『-KE』	Inverse logic ※5	○
8bit digital input AE type (custom-made) 『-AE』	Inverse polarity of COMMON ※5	○
8bit digital input AC type (custom-made) 『-AC』	Inverse logic and inverse polarity of COMMON ※5	○

※1 Please inquire to MORITEX about cable different in length.

※2 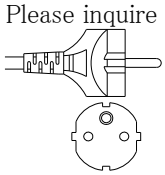

CE
up to AC 250V

※3 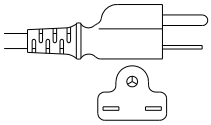

<PS>E
up to AC 250V

※4 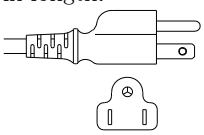

<PS>E/UL/CSA
up to AC 125V



Adapter
(for Japan only)

<PS>E

(Please check conforming to the relevant standards of country or area where you use cord.)
(Please inquire to MORITEX about specifications of Power Supply Cord.)

※5 Refer to Chart 1 (with suffix of model name: -KE, -AE, -AC)

※6 An extension cable of 3m is not the adaptation of CE.

Chart 1

Type	COMMON	State of output (Illuminator)				Error signal output form
		8bit Logic	8bit open	ON/OFF Logic	ON/OFF open	
Standard (KC)	+	L = OFF	Max ON	L = OFF	ON	Open Emitter
KE	+	L = ON	OFF	L = OFF	ON	Open Emitter
AC	−	H = OFF	Max ON	H = OFF	ON	Open Collector
AE	−	H = ON	OFF	H = OFF	ON	Open Collector

※ COMMON ＋: External power supply ＋, COMMON −: External power supply −

※ Logic H: External power supply ＋, Logic L: External power supply −

Digital option Pin assignment

・KE type

Refer to Page 19: Pin assignment

・AC/AE type

No.	Identification		No.	Identification	
1	8bit digital input 2^0(LSB)		9	COMMON (－)	※1
2	8bit digital input 2^1		10	Input ON／OFF signal	※2
3	8bit digital input 2^2		11	Control error signal output	※4
4	8bit digital input 2^3	※3	12	NC	
5	8bit digital input 2^4		13	NC	
6	8bit digital input 2^5		14	NC	
7	8bit digital input 2^6		15	NC	
8	8bit digital input 2^7(MSB)				

※1 It is possible to input a voltage between 5V and 24V for COMMON.
・Please do not change the input voltage during operation.
※2 Input "H" ・・・・・・・・・・・・・・・・・・・・・・・・ Output OFF
Current: 1 mA (H = 5 V), 6 mA (H = 24 V) /Input voltage
Input "L"(COMMON) or Input open ・・・・・ Output ON
・Operation possible regardless from MANU/REMO selection.
※3 Only for REMO Control (Refer to Truth Table, shown below)
・Input "H", Current per circuit: 1 mA (H = 5 V), 6 mA (H = 24 V) /Input voltage
※4 Open-Collector type output with following characteristics:
Normal Condition (no errors detected): Open Circuit
Control Error detected: Output short circuited to COMMON
・Please use signal with current equal or less than 4 mA.
・Function regardless of MANU/REMO selection

Digital option Truth table

・KE type

Output control SW		External signals COMMON ＋									Output	
COARSE	FINE	Output ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	State of output (Illuminator)	Control Error
×	×	L	×	×	×	×	×	×	×	×	Output OFF	×
×	×	H	×	×	×	×	×	×	×	×	Output ON	×
×	×	×	×	×	×	×	×	×	×	×	Control Error	H
0	0	H	H	H	H	H	H	H	H	H	Output MIN	L
0	1	H	H	H	H	H	H	H	H	L		L
0	2	H	H	H	H	H	H	H	L	H		L
:	:	:	:	:	:	:	:	:	:	:	:	L
:	:	:	:	:	:	:	:	:	:	:	:	L
F	D	H	L	L	L	L	L	L	H	L		L
F	E	H	L	L	L	L	L	L	L	H		L
F	F	H	L	L	L	L	L	L	L	L	Output MAX	L

Input H : Input High(COMMON) or Input open
L : Input Low
Output (Control Error) H : Short Circuit to COMMON (Photo-coupler ON)
L : Open Circuit (Photo-coupler OFF)
× : H ・ L state not relevant
(COARSE,FINE): Range between (0,0) and about (0,5) does not turn on the Illuminator.

・AC type

Output control SW		External signals COMMON －									Output	
COARSE	FINE	Output ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	State of output (Illuminator)	Control Error
×	×	H	×	×	×	×	×	×	×	×	Output OFF	×
×	×	L	×	×	×	×	×	×	×	×	Output ON	×
×	×	×	×	×	×	×	×	×	×	×	Control Error	L
0	0	L	H	H	H	H	H	H	H	H	Output MIN	H
0	1	L	H	H	H	H	H	H	H	L		H
0	2	L	H	H	H	H	H	H	L	H		H
:	:	:	:	:	:	:	:	:	:	:	:	H
:	:	:	:	:	:	:	:	:	:	:	:	H
F	D	L	L	L	L	L	L	L	H	L		H
F	E	L	L	L	L	L	L	L	L	H		H
F	F	L	L	L	L	L	L	L	L	L	Output MAX	H

Input H : Input High
L : Input Low(COMMON) or Input open
Output (Control Error) H : Open Circuit (Photo-coupler OFF)
L : Short Circuit to COMMON (Photo-coupler ON)
× : H ・ L state not relevant
(COARSE,FINE): Range between (0,0) and about (0,5) does not turn on the Illuminator.

・AE type

Output control SW		External signals COMMON −									Output	
COARSE	FINE	Output ON/OFF	Bit 2^7	Bit 2^6	Bit 2^5	Bit 2^4	Bit 2^3	Bit 2^2	Bit 2^1	Bit 2^0	State of output (Illuminator)	Control Error
×	×	H	×	×	×	×	×	×	×	×	Output OFF	×
×	×	L	×	×	×	×	×	×	×	×	Output ON	×
×	×	×	×	×	×	×	×	×	×	×	Control Error	L
0	0	L	L	L	L	L	L	L	L	L	Output MIN	H
0	1	L	L	L	L	L	L	L	L	H		H
0	2	L	L	L	L	L	L	L	H	L		H
:	:	:	:	:	:	:	:	:	:	:	:	H
:	:	:	:	:	:	:	:	:	:	:	:	H
F	D	L	H	H	H	H	H	H	L	H		H
F	E	L	H	H	H	H	H	H	H	L		H
F	F	L	H	H	H	H	H	H	H	H	Output MAX	H

Input H : Input High
L : Input Low(COMMON) or Input open
Output (Control Error) H : Open Circuit (Photo-coupler OFF)
L : Short Circuit to COMMON (Photo-coupler ON)
× : H ・ L state not relevant
(COARSE,FINE): Range between (0,0) and about (0,5) does not turn on the Illuminator.

Digital option Example of input and output circuit

・KE type

Refer to Page 20: Example of input and output circuit

・AC/AE type

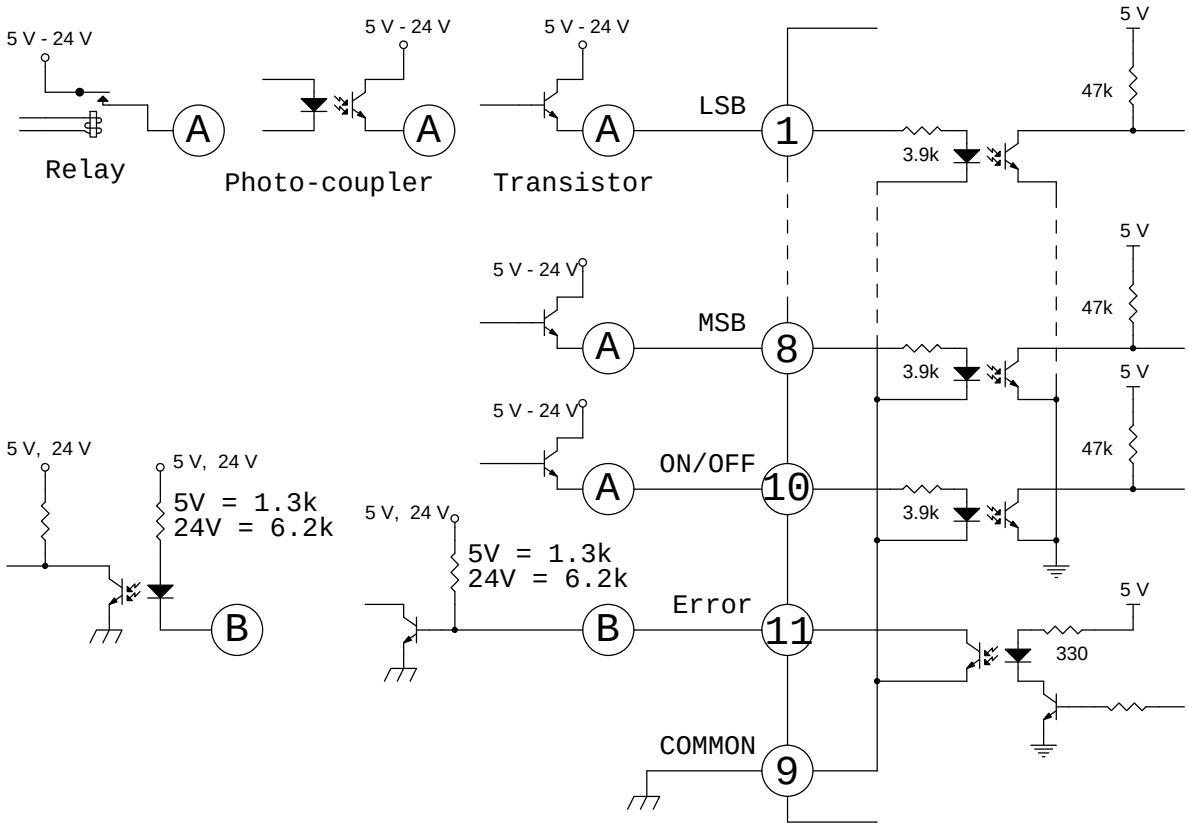

Dimensions

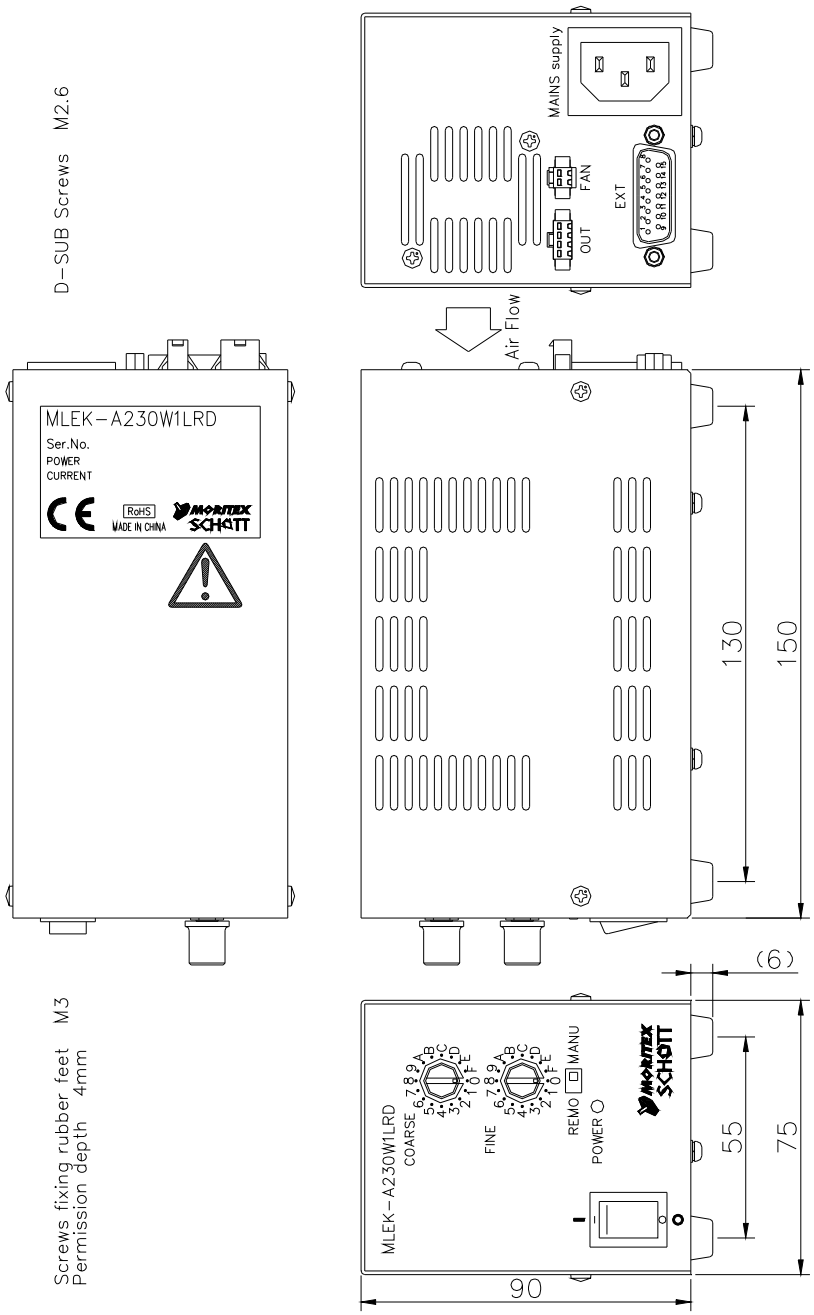

The drawings show the MLEK-A230W1LRD unit.
MLEK-A080W1LRD does not have Cooling Fan, Connector for Fan of Illuminator (FAN) and air holes on the back of the unit.

7. Others

1. Do not dispose equipment and/or parts of the equipment as unsorted municipal waste but collect them separately.
2. Before disposal of the equipment and/or parts of it, please contact Moritex Europe for any return or disposal methods/systems.
3. This symbol indicates separate collection of electrical and electronic equipment. Do not dispose equipment and/or parts of the equipment as unsorted municipal waste.

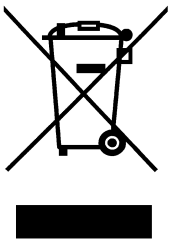

4. The equipment will be treated according to Directive 2002/96/EC (WEEE: Waste Electrical and Electronic Equipment). It is of highest importance to preserve, protect the quality of the environment, protect human health and to utilise natural resources prudently and rationally. Please be aware that it is also your responsibility to act in this sense, by disposing the equipment and/or parts of the equipment according to this Instruction Manual.

《Appendix》

・If there are any unclear points or if you have any questions, please feel free to inquire MORITEX.
For repair or after sales service, please contact any MORITEX office or the sales office where you have purchased the unit.

・Please provide following information when requesting service.

Model	:	MLKE-A080W1LRD / MLEK-A230W1LRD
Ser. No.	:	Indicated on the product
Date of purchase	:	. . .
State of trouble	:	Please provide detailed information
Your name (company name and/or individual name), address, telephone/FAX number, email-address		

株式会社モリテックス

MVS・工業用営業本部
〒170-0013 東京都豊島区東池袋4-39-11 サニービル池袋
TEL 03-6367-3631 FAX 03-3590-6627
Email mvs@moritex.co.jp www.moritex.co.jp

MORITEX Corporation

MVS & Industrial Sales Division
Sunny Building Ikebukuro
4-39-11 Higashi Ikebukuro,Toshima-ku,Tokyo,170-0013 Japan
Phone +81-3-6367-3634 FAX +81-3-3590-6629
Email sales@moritex.co.jp www.moritex.co.jp

MORITEX U.S.A., Inc.
6862 Santa Teresa Blvd., San Jose, CA 95119, U.S.A
Phone +1-408-363-2100 FAX +1-408-363-9980
Email sales@moritexusa.co.jp www.moritexusa.com

MORITEX Singapore Pte Ltd.
18 Boon Lay Way, #09-166, TradeHub 21, Singapore 609966
Phone +65-6515-9368 FAX +65-6515-9360
Email sales@moritex.com.sg www.moritex.com.sg

MORITEX Asia Co.,Ltd.
Units 1201A and 1211 - 1212 of Tower 1 of Ever Gain Plaza, 88 Container Port Road,
Kwai Chung, New Territories, Hong Kong
Phone +852-2439-0968 FAX +852-2439-0377
Email sales@moritex.asia www.moritex.asia

Lighting and Imaging
SCHOTT AG
Otto Schott Strasse 2, 55127 Mainz Germany
Phone +49(0)6131/66-7752 FAX +49(0)6131/66-7850
Email lightingimaging@schott.com www.schott.com/lightingimaging